

AEG

Pyramid



Cordless Digital Telephone with Answering Machine

Warning

Charge the handset for 24 hours before use.

Welcome...

to your new Pyramid Digital Cordless Telephone and Answering Machine

- 50 Name and number phonebook for storing your most frequently used numbers.
- Digital answering machine for high quality message recording.
- Caller Display shows you who's calling before you answer the phone* and keeps a list of your last 40 callers. You can also dial numbers direct from the Calls list.
- Redial up to 10 of the last numbers called.
- Register up to 5 handsets to the base.
- Make internal calls and transfer external calls between handsets.
- Choose from 10 different ringtones for internal and external calls as well as numbers stored in the phonebook.

* Subscription to Caller Display service may be required. Please contact your telephony service provider.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in ‘Getting Started’, over the next few pages.

Need help?

You may find the answer in ‘Help’ at the back of this guide.

Hearing aid?

Please note that the Pyramid works by sending radio signals between the base and handset.

These signals may interfere with some hearing aids, causing a humming noise.

AEG

I. Getting started	5
1. Location	5
2. Setting up the base and handset	5
3. Talk/Standby time	6
4. Battery low warning	6
5. Battery performance	6
6. Handset range	6
7. Signal strength	6
8. Pyramid multipack users only	7
II. Getting to know your phone	8
1. Handset buttons	8
2. Handset LCD Display	9
3. Display icons	10
4. Using the menu	10
5. Menu map	11
6. Answering machine base and charger	12
III. Using your phone	13
1. Switch the handset power on/off	13
2. Make a call	13
3. Preparatory dialling	13
4. End a call	13
5. Handsfree	14
6. Receiving calls	14
7. Secrecy	14
8. Adjusting the earpiece volume	14
9. Redial	15
10. Delete a number from the redial list	15
11. Delete the entire redial list	15
12. Store a redial number to the phonebook	15
13. Keypad lock	16
14. Find handset/ Paging	16

AEG

IV. Using the phonebook.....	16
1. Add an entry to the phonebook.....	16
2. Dial from the phonebook.....	17
3. Edit an entry.....	18
4. Delete an entry	18
V. Caller Display & the Calls list.....	18
1. Caller Display.....	18
2. Calls list	19
3. View the Calls list.....	20
4. Dial a number in the Calls list	20
5. Store a number to the phonebook	20
6. Delete an entry	20
7. Delete the entire Calls list	21
VI. Handset settings.....	21
1. Handset ringer volume.....	21
2. Handset ringer melody.....	21
3. Handset name	22
4. Language.....	22
5. Keypad beep on/off.....	22
6. Battery low warning beep on/off	23
7. Out of range warning beep on/off	23
8. Keypad lock via the menu.....	23
9. Auto answer.....	23
10. Set the date	24
11. Set the time.....	24
12. Set the alarm	24
13. To silence the alarm	24

AEG

VII. Base settings	24
1. Base ringer volume	24
2. Base ringer melody	25
3. Change base PIN code.....	25
4. Reset	25
5. Emergency default.....	26
6. Default settings	26
VIII. Additional handsets and bases.....	27
1. Internal calls.....	27
2. Transfer an external call	27
3. 3-Way call	28
4. Register a new Pyramid handset to your Pyramid base.....	28
5. Register a different make of handset to your Pyramid base.....	29
6. Selecting a base	29
7. De-register a handset	29
IX. Using the answering machine.....	30
1. Set the answering machine day and time using the handset.	30
2. Check the current day and time setting	31
3. Switch the answering machine on/off	31
4. Listening to your messages	31
5. Adjust the speaker volume	32
6. Outgoing messages (OGMs)	33
7. Record your own OGM	33
8. Answer Only	33
9. Check your current OGM.....	34
10. Select the OGM	34
11. Re-instate the pre-recorded OGM	34
12. Answer delay	35
13. Record a memo	35
14. Call screening.....	36
15. Memory full	36

AEG

X. Using remote access.....	36
1. Operating your answering machine from another phone.....	36
2. Set the security PIN code	37
3. Check security code	37
XI. Help.....	37
XII. General information	39

AEG

I. Getting started

1. Location

You need to place your Pyramid product within 2 metres of the mains power socket and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference.

Your Pyramid product works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible can help to provide the best signal.

WARNING

Do not place your Pyramid product in the bathroom or other humid areas.

2. Setting up the base and handset

1. Plug the power adaptor and telephone cable into the underside of the base.
2. Plug the power adaptor into the mains wall socket and switch the power on.
3. Remove the battery cover from the back of the handset and insert the 2 x AAA rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert the batteries the correct way around. Slide the battery compartment shut.

WARNING

Never use non-rechargeable batteries. Only use the approved rechargeable batteries supplied. Using unapproved batteries will invalidate your guarantee and may damage the telephone.

4. Place the handset on the base to charge. You should let the batteries charge continuously for at least 24 hours.
The batteries and handset case may become warm during charging, this is normal.
5. Once fully charged, plug the telephone line cord into the telephone wall socket.

IMPORTANT

Do not connect the telephone line cord to the telephone line wall socket until the handset is fully charged and only use the telephone line cord provided.

The base station should be plugged into the mains power socket at all times.


AEG

3. Talk/Standby time

Under ideal conditions, the handset batteries should give about 10 hours 30 minutes talk time or 160 hours standby on a single charge. (This does not mean you can unplug the base or leave it for this length of time without charge).

Please note that new NiMH rechargeable batteries do not reach full capacity until they have been in normal use for several days.

4. Battery low warning

If the  icon is flashing in the display and you hear a warning beep every minute during a call, you will need to recharge your handset before you can use it again.

5. Battery performance

To keep the batteries in the best condition, leave the handset off the base for a few hours at a time. Running the batteries right down at least once a week will help them last as long as possible.


After charging your handset for the first time, subsequent charging time for the batteries is approximately 6–8 hours.

The charge capacity of rechargeable batteries will reduce with time as they wear out, thus reducing the talk/standby time. Eventually they will need replacing.

6. Handset range

The Pyramid product has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range.

7. Signal strength

The  icon on your handset display indicates when you are in range of the base. When it flashes and you hear a warning beep, you are out of range and will need to move closer to the base.

8. Pyramid multipack users only

Place each Pyramid charger within reach of a mains power wall socket.

Connect the charger(s) and charge the handset(s)

1. Plug the mains power adaptor into the power socket on the underside of the charger and plug the other end to the mains power wall socket.
2. Insert the 2 x AAA rechargeable batteries supplied, taking note of the '+' and '-' markings inside the battery compartment, then slide the battery compartment shut.
3. Place the handset on the charger. You should let the batteries charge continuously for at least 24 hours.


The display will show the time and the handset number, e.g. « **2** », to show it is registered to the base.

Your phone is now set up to make and receive calls. Please note that the answering machine is already switched on and is ready to answer incoming calls.

To switch the answering machine off press **On/Off** on the base. The machine announces "Answer Off". See page 31 for more information about your answering machine.

II. Getting to know your phone

1. Handset buttons

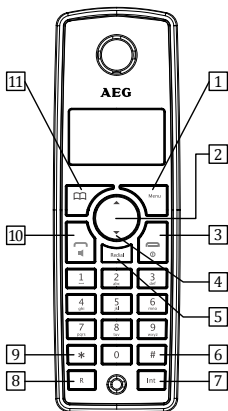


1	Menu/OK/Secrecy Press to open the menu, page 10. Press to select menu options and to confirm a displayed option. During a call, press to switch Secrecy on/off. When on, your voice will be muted so your caller cannot hear you, page 14.	2	Up/Down Scroll up or down through menu options, calls lists, redial lists and phonebook entries. During a call, press up or down to adjust the earpiece volume, page 14. While the phone is ringing, press up or down to adjust the handset ringer volume, page 21.
3	End call Press to end calls, page 13. When viewing the redial/Calls list or when editing, press to exit and return to standby. Press and hold to switch the handset on/off, page 13.	4	Calls list Press to open the Calls list, page 19.

AEG

5	Redial Press to open the redial list, page 15.	6	#/Pause When dialling/storing a number, press and hold to enter a pause, page 41.
7	Int Use to make internal calls and transfer calls to other Pyramid handsets registered to the base, page 27.	8	Recall Use with switchboard services and some network services.
9	*/Keypad lock Use to lock/unlock the keypad to prevent accidental dialling, page 16.	10	Talk/Handsfree Press to make and receive calls, page 13.
11	Phonebook/Clear/Back Press to open the phonebook, page 16. In menu mode, press to return to the previous menu. In enter/edit mode, press and hold to delete characters and digits, when viewing the calls/redial list, press to delete the displayed entry or press and hold to delete all entries.		

2. Handset LCD Display

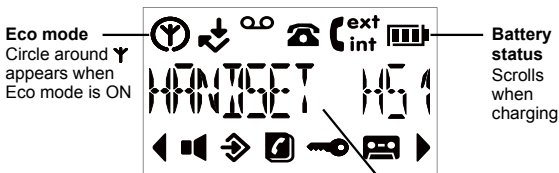


















Time or Handset name

In standby mode, press and hold 0 to switch handset idle screen between handset name or time.




AEG

3. Display icons

-  Flashes to indicate an incoming external call
-  External call in progress
-  Flashes to indicate an incoming internal call
-  Internal call in progress
-  3-way call in progress or transfer an external call to another Pyramid handset registered to the base
-  Eco mode is ON
-  Flashes to indicate new voicemail messages received
Off when you have no voicemail messages
-  Indicates signal strength
Flashes when handset is not registered to the base or if you go out of range
-  Handsfree mode is ON

-  Menu is opened
-  Phonebook is opened
-  Flashes to indicate new calls list entries received*
-  Answered call (when viewing the Calls list)*
-  Unanswered call (when viewing the Calls list)*
-  Keypad is locked
-  Answering machine is ON
-  Displayed number is longer than 12 digits


The approximate power levels of your battery are indicated as follows:

-  Battery is fully charged
-  Battery is partially charged
-  Battery is running low
Flashes when battery is almost fully discharged

** Subscription to Caller Display service may be required. Please contact your telephony service provider.*

4. Using the menu

All your phone's functions and settings can be accessed through the main menu. The menu map below shows all menu options you can choose from.

Press **Menu/OK/Secrecy** to enter the menu. The  icon is displayed.

Press **Up/Down** to scroll through the menu options. When you reach the end of the list, the first option is displayed again and the handset sounds a beep.

To select an option, press **Menu/OK/Secrecy**.

To return to the previous menu display, press **Phonebook/Clear/Back**.

AEG

- Quick exit a menu

If you want to exit a menu or cancel an operation at any time you can press **End call** to return to the standby screen.

5. Menu map


PLAY MESSAGE	
PHONEBOOK	<ul style="list-style-type: none">- ADD ENTRY- MODIFY ENTRY- DELETE ENTRY
TAM SETTINGS	<ul style="list-style-type: none">- ANS ON/OFF- ANS MODE- MEMO REC- OGM SETTING- DAY SETTING- ANS DELAY- REMOTE CODE
SETUP	<ul style="list-style-type: none">- BASE VOLUME- BASE MELODY- DEL HANDSET- PIN CODE- DIAL MODE- DEFAULT
HANDSET	<ul style="list-style-type: none">- BEEP- INT RING VOL- EXT RING VOL- INT MELODY- EXT MELODY- AUTO ANSWER- NAME- LANGUAGE- KEYLOCK?

AEG

DATE – TIME	- DATE SET - CLOCK SET - ALARM SET
REGISTER	- SELECT BASE - REG BASE

6. Answering machine base and charger

See page 30 for more detailed information about your answering machine.

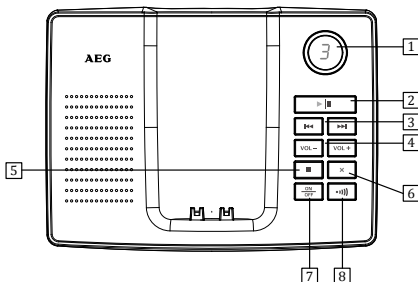

1	New message indicator Displays the number of new messages and memos received.	2	Play/Pause Play or pause recorded messages. Press to play new messages or press and hold to play all message.
3	Prev/Skip Press to skip forward or backward through your answering machine messages. Press and hold Prev to turn message alert on/off, press Skip to announce the current answer delay setting.	4	Vol +/- Adjust playback volume.

AEG

5	Stop Stops message playback. Press to announce the current day and time setting.	6	Del Press to delete recorded messages during playback or press to announce the current remote access code setting.
7	On/Off Switches the answering machine on/off.	8	Find Press to find misplaced handsets registered to the base, page 16. Use to register handsets to the base, page 28.

III. Using your phone

1. Switch the handset power on/off

1. To switch off, press and hold **End call** until the display goes off.
2. To switch the handset on, press and hold **End call**.

2. Make a call

Press **Talk/Handsfree**. When you hear the dial tone, dial the phone number.

- Dialling numbers quickly

Numbers can also be dialled direct from the phonebook (page 17), the calls list (page 20), or the redial list (page 15).

3. Preparatory dialling

1. Enter the phone number first. The number is shown in the display.
If you make a mistake as you enter the number, press **Phonebook/Clear/Back** to delete a digit.
2. Press **Talk/Handsfree** to dial the number.

4. End a call

Press **End call**, or place the handset back on the base/charger.

AEG

5. Handsfree

You can press **Talk/Handsfree** twice to make or answer a call in Handsfree mode. You can press **Talk/Handsfree** each time you wish to switch between handset and handsfree mode.

6. Receiving calls

When the phone rings, press **Talk/Handsfree** to answer the call, or if the handset is on the base or charger, simply lift it to answer the call.

If you would rather press **Talk/Handsfree** after lifting the handset to receive a call, you will need to switch Auto-answer off, see page 23.

- Call timer

After the first 15 seconds of your call, the call timer is displayed. At the end of your call, the total duration is not shown for 5 seconds.

- Caller Display

If you have subscribed to your network's Caller Display service, the caller's number (or name, if an exact number match is found in the phonebook) will also be displayed, see page 18.

7. Secrecy

You can 'Mute' your handset to stop your caller from hearing you while you talk to someone else close by.

1. During a call, press **Menu/OK/Secrecy**. The handset microphone is muted and the display shows « **MUTE** ».
2. Press **Menu/OK/Secrecy** again to resume your call.

8. Adjusting the earpiece volume

During a call, press **Up** to increase or **Down** to decrease the volume.

AEG

9. Redial

The last 10 numbers dialled are stored in the redial list.

1. Press **Redial** to open the redial list. The most recently dialled number is displayed. If the number matches an entry stored in the handset phonebook, the name is displayed.
2. Scroll **Up/Down** to the number or name you want.
3. Press **Talk/Handsfree** to redial the entry displayed.

- Display the name or number

In the redial list, when the name is displayed, you can switch to the number by pressing **Menu/OK/Secrecy**.

10. Delete a number from the redial list

1. Press **Redial** then scroll **Up/Down** to the entry you want.
2. Press **Phonebook/Clear/Back**. « **DELETE ?** » is displayed, press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to cancel.

11. Delete the entire redial list

1. Press **Redial** to open the redial list, then press and hold **Phonebook/Clear/Back**. Display shows « **DELETE ALL ?** ».
2. Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to cancel.

12. Store a redial number to the phonebook


1. Press **Redial** then scroll **Up/Down** through the list to the entry you want.
2. Press **Menu/OK/Secrecy**. The display shows « **ADD?** ». Press **Menu/OK/Secrecy** again.
3. The display shows « **NAME?** » Use the keypad to enter the name, then press **Menu/OK/Secrecy**.
4. The number is displayed, edit the number if necessary, then press **Menu/OK/Secrecy**. « **MELODY 1** » is displayed.
5. Scroll **Up/Down** to select a ringtone and press **Menu/OK/Secrecy** to confirm. The entry is stored. Each number saved in the redial list can be up to 32 digits long.

AEG

13. Keypad lock

You can lock the handset keypad to prevent accidental dialling while carrying it around.

You do not need to unlock the keypad to answer a call, just press **Talk/Handsfree** or lift the handset as normal.

1. To lock the keypad press and hold ***/Keypad lock** until the display shows the  icon.
To unlock the keypad press any button, the display shows « **PRESS *** ».
2. Press ***/Keypad lock** within 3 seconds.

14. Find handset/ Paging

You can locate a missing handset. Paging calls cannot be answered by a handset.

1. Press **Find** on the base. All handsets registered to the base will ring. To stop the ringing, press any button on a handset or press **Find** again on the base.

IV. Using the phonebook

You can store up to 50 name and number entries on each Pyramid handset registered to your base.

Each name can be up to 12 characters long and each number up to 24 digits long.

You open the phonebook with the **Phonebook/Clear/Back** button.

1. Add an entry to the phonebook

For each entry you store, you can select one of 10 different ringtones. For example, you can assign one ringtone to friends and family and another ringtone to other callers.

1. Press **Menu/OK/Secrecy**. The display shows « **PHONE BOOK** », press **Menu/OK/Secrecy**.
2. The display shows « **ADD ENTRY** ». Press **Menu/OK/Secrecy**.
3. The display shows « **NAME ?** ». Use the keypad to enter the name and press **Menu/OK/Secrecy**.
4. The display shows « **NUMBER ?** ». Use the keypad to enter the phone number and press **Menu/OK/Secrecy**. It's best to enter the full number, including the area code (see 'Caller Display' on page 18).

AEG

5. The display shows « **MELODY 1** », press **Up/Down** to select the ringtone you want.

To assign a ringtone to a specific caller you must subscribe to a Caller Display Service from your network provider. For more information, see page 18.

6. Press **Menu/OK/Secrecy** to confirm. « **ADD ENTRY** » is displayed. You can now enter your next name and number or press **Phonebook/Clear/Back** twice to return to standby.

- Entering names

Use the keypad to enter the letters shown on each button.

For example to store TOM:

8 Press once to enter T.

6 Press three times to enter O.

6 Press once to enter M.


If the next letter you want to enter is on the same button, wait a moment then press the button again.

Press **Phonebook/Clear/Back** to delete an incorrect character or digit.

To enter a space press **1**.

To enter a dash, press **1** twice.

2. Dial from the phonebook

1. Press **Phonebook/Clear/Back** to open the phonebook. The  icon is displayed.

2. Scroll **Up/Down** to the entry you want.

Or, search alphabetically by entering the first letter of the name. The first name that starts with this letter will be displayed. You can now refine your search by scrolling **Up/Down**.

3. Press **Talk/Handsfree** to dial or **Phonebook/Clear/Back** to return to standby.

- Display the name or number

When name is displayed, you can switch between the name and number by pressing **Menu/OK/Secrecy**.

AEG

3. Edit an entry

1. Press **Menu/OK/Secrecy**. The display shows « **PHONE BOOK** », press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **MODIFY ENTRY** » and press **Menu/OK/Secrecy**.
3. Scroll **Up/Down** to the entry you want edit, or search alphabetically and press **Menu/OK/Secrecy**.
4. Press **Phonebook/Clear/Back** to delete the name if required, then enter the new name and press **Menu/OK/Secrecy**.
5. Press **Phonebook/Clear/Back** to delete the number if required, then enter the new number and press **Menu/OK/Secrecy**.
6. If required, select a new melody then press **Menu/OK/Secrecy** to confirm.
7. « **ADD ENTRY** » is displayed. You can now enter your next name and number or press **Phonebook/Clear/Back** twice to return to standby.

4. Delete an entry

1. Press **Menu/OK/Secrecy**. The display shows « **PHONE BOOK** », press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **DELETE ENTRY** » and press **Menu/OK/Secrecy**.
3. Scroll **Up/Down** to the entry you want delete, or search alphabetically.
4. Press **Menu/OK/Secrecy**. Display shows « **CONFIRM ?** ».
5. Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to cancel.

V. Caller Display & the Calls list

1. Caller Display

Caller Display shows who is calling and if the caller's number matches an entry stored in the phonebook, the number will alternate with the name.

To use Caller Display you must first subscribe to your network provider's Caller Display service. A quarterly fee may be payable.

Caller Display information contains the full telephone number, including the area code. So when storing numbers in the phonebook remember to include the area code, otherwise the caller's number will not match.

AEG

- Caller information

The display can show the first 12 characters of phone numbers and names. For this feature to work you must subscribe to a Caller Display Service.

During a call, the caller's details are replaced by the call timer after 15 seconds. To review the calls list after the call, press **Down** and then press **Menu/OK/Secrecy** to transfer to call timer from the caller's details.

With some incoming calls, the telephone number of the caller is not available and cannot therefore be displayed. In this case some explanatory information will be displayed.

« **WITHHELD** » The caller has withheld their number.

« **UNAVAILABLE** » The number is unavailable.

« **RINGBACK** » Ringback call.

« **INTERNATIONAL** » International call.



« **OPERATOR** » Call from operator.

« **PAYPHONE** » Call from a payphone.

2. Calls list

The Calls list stores details of your last 40 calls received, including the phone number and date and time of the call.




The Calls list also alerts you to unanswered calls.

When a new call is received in the Calls list, the  icon will flash in the display when in standby mode to alert you. When you have viewed the new call, the  icon will disappear.

The list is shared between all handsets registered to the base. When the Calls list is full, the most recent calls received automatically replace the oldest calls.

AEG

3. View the Calls list

1. Press **Down** to open the Calls list. If there are no calls in the list, the display shows « **EMPTY** ».
2. Press **Up/Down** to scroll through the list. When the  icon is displayed, this call was answered; when the  icon is displayed, the call was unanswered. When you reach the end of the list, the handset will beep. If the caller's number exactly matches an entry stored in the handset phonebook, the name will be displayed. Press **Menu/OK/Secrecy** to see the caller's number. If the telephone number is longer than 12 digits, the  icon is displayed. Press **Menu/OK/Secrecy** again to see the complete number. Press **Menu/OK/Secrecy** again to see the time and date of the call. Pressing **Menu/OK/Secrecy** again will give you the option to add this entry in the phonebook if it's not already stored. If it is already stored in the phonebook you can still add the entry by pressing **Menu/OK/Secrecy** again.

4. Dial a number in the Calls list

1. Press **Down** then scroll **Up/Down** through the list to the entry you want.
2. Press **Talk/Handsfree** to dial the displayed entry.

5. Store a number to the phonebook

1. Press **Down** then scroll **Up/Down** through the list to the entry you want.
2. Press **Menu/OK/Secrecy** repeatedly until the display shows « **ADD?** ». Press **Menu/OK/Secrecy** again.
3. The display shows « **NAME?** ». Use the keypad to enter the name, then press **Menu/OK/Secrecy**. If you need help entering a name, see page 17.
4. The number is displayed, edit the number if necessary, then press **Menu/OK/Secrecy**.
5. Scroll **Up** and **Down** to select a ringtone and press **Menu/OK/Secrecy** to confirm. The entry is stored.

6. Delete an entry

1. Press **Down** then scroll **Up/Down** through the list to the entry you want.
2. Press **Phonebook/Clear/Back**. Display shows « **DELETE ?** ».
3. Press **Menu/OK/Secrecy** to confirm or press **Phonebook/Clear/Back** to cancel.

AEG

7. Delete the entire Calls list

1. Press **Down**.
2. Press and hold **Phonebook/Clear/Back**. Display shows « **DELETE ALL ?** ».
3. Press **Menu/OK/Secrecy** to confirm or press **Phonebook/Clear/Back** to cancel.

VI. Handset settings

1. Handset ringer volume

You can adjust the ring volume and set different levels for internal and external calls. Choose from 5 levels and Off.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **INT RING VOL** » or « **EXT RING VOL** » and press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select the volume (1–5 or « **OFF** »).
4. Press **Menu/OK/Secrecy** to confirm or to **Phonebook/Clear/Back** return to the previous menu.

*Note: While the phone is ringing you can adjust the ringer volume by pressing **Up/Down**.*

2. Handset ringer melody

You can set different ringer melodies for internal and external calls. Choose from 10 different melodies.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **EXT MELODY** » or « **INT MELODY** » then press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select the ringer melody (1 to 10).
4. Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to return to the previous menu.

Note: Calls from numbers stored in the phonebook will ring using the ringer melody set when storing the entry.

AEG

3. Handset name

You can give your handset a name according to use, eg. Kitchen or Michael. The name appears in the display.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **NAME** » and press **Menu/OK/Secrecy**.
3. Enter the new handset name and press **Menu/OK/Secrecy** to confirm.
If you make a mistake press **Phonebook/Clear/Back** to delete an incorrect character or digit.
See 'Entering names' on page 17 for help on entering names.

4. Language

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **LANGUAGE** » and press **Menu/OK/Secrecy**.
3. Scroll **Up/Down** to select your preferred language and press **Menu/OK/Secrecy** to confirm.

Your language options are:

English/French/German/Italian/Spanish/Danish/Swedish/Slovak/Dutch/
Portuguese/Norwegian/Russian/Greek/Hungarian/Polish/Czech/Finnish.

5. Keypad beep on/off

Whenever you press a button on the handset keypad, the handset gives a beep. You can switch these beeps on or off.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. « **BEEP** » is displayed, press **Menu/OK/Secrecy**.
3. « **KEYTONE** » is displayed, press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select « **ON** » or « **OFF** » and press **Menu/OK/Secrecy** to confirm.

AEG

6. Battery low warning beep on/off


1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. « **BEEP** » is displayed, press **Menu/OK/Secrecy**.
3. Scroll **Down** to « **LOW BATTERY** » and press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select « **ON** » or « **OFF** » and press **Menu/OK/Secrecy** to confirm.

7. Out of range warning beep on/off

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. « **BEEP** » is displayed, press **Menu/OK/Secrecy**.
3. Scroll **Down** to « **OUT RANGE** » and press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select « **ON** » or « **OFF** » and press **Menu/OK/Secrecy** to confirm.

8. Keypad lock via the menu

You can use the menu to lock the keypad.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **KEYLOCK ?** » and press **Menu/OK/Secrecy** to confirm.
The display shows the  icon.
To unlock the keypad, press any button on the keypad, then press ***/Keypad lock** within 3 seconds.

9. Auto answer

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls always have to be answered by pressing **Talk/Handsfree**.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **HANDSET** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **AUTO ANSWER** » and press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select « **ON** » or « **OFF** » and press **Menu/OK/Secrecy** to confirm.

AEG

10. Set the date

1. Press **Menu/OK/Secrecy**, scroll to « **DATE-TIME** » and press **Menu/OK/Secrecy**.
2. Display shows « **DATE SET** », press **Menu/OK/Secrecy**.
3. Use the keypad to enter the date, e.g. 12--08 for 12th August.
4. Press **Menu/OK/Secrecy** to confirm.

11. Set the time

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **DATE-TIME** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **CLOCK SET** » and press **Menu/OK/Secrecy**.
3. Use the keypad to set the time in the 24 hour format, e.g. 18--30 for 6.30 pm.
4. Press **Menu/OK/Secrecy** to confirm.

Note: If you have subscribed to your network's Caller Display service, the day and time will be set on the handset automatically.

12. Set the alarm

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **DATE-TIME** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **ALARM SET** » and press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select « **ON** » or « **OFF** » and press **Menu/OK/Secrecy**.
4. If you selected « **ON** », use the keypad to enter the time you want the alarm to sound, e.g. 07--30 for 7.30 am.

13. To silence the alarm

When the alarm sounds, press any button to turn it off.

VII. Base settings

1. Base ringer volume

You can choose from 5 volume levels and Off.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **SETUP** » and press **Menu/OK/Secrecy**.

AEG

2. Display shows « **BASE VOLUME** », press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select the volume (1–5 or « **OFF** »).
4. Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to return to the previous menu.

2. Base ringer melody

Choose from 5 different base ringer melodies.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **SETUP** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **BASE MELODY** » and press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select the ringer melody (1 to 5).
4. Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to return to the previous menu.

3. Change base PIN code

Some functions are protected by a 4 digit PIN code which must be entered if you want to change the settings.

The default PIN is 0000.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **SETUP** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **PIN CODE** » and press **Menu/OK/Secrecy**.
3. Enter the current 4 digit PIN code (default: 0000) and press **Menu/OK/Secrecy**.
4. Enter your new 4-digit PIN and press **Menu/OK/Secrecy**.
5. Re-enter the new PIN again and press **Menu/OK/Secrecy** to confirm.

IMPORTANT

If you change the base PIN, make sure you keep a record of the new number on page 43.

4. Reset

You can reset your phone to its default settings.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **SETUP** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **DEFAULT** » and press **Menu/OK/Secrecy**.
3. Enter the 4 digit PIN code (default: 0000) and press **Menu/OK/Secrecy**.

AEG

4. Display shows « **CONFIRM?** ». Press **Menu/OK/Secrecy** to confirm or **Phonebook/Clear/Back** to return to the previous menu.
The phone will switch itself off and back on again.
All settings will be reset to their default.

5. Emergency default

If you have lost your PIN code you can still restore your Pyramid product to its default settings.

1. Remove and replace the batteries from the handset.
2. Press and hold the ***/Keypad lock** key while inserting the batteries back in.
The display shows « **DEFAULT** ». Press the **Menu/OK/Secrecy** key.

WARNING

Resetting your phone to its default settings will delete any entries in the Phonebook, Redial and Calls list and will reset the clock and alarm settings.

6. Default settings

Low battery beeps	ON
Out of range warning beeps	ON
Key beep	ON
Auto answer	ON
Internal melody	1
Internal volume	5
External melody	1
External volume	5
Ear volume	3

Base melody	1
Base ringer volume	5
Phonebook	Empty
Call log list	Empty
Redial list	Empty
Pin code	0000
Dial mode	Tone
Keypad lock	OFF
Answering machine	ON

AEG

VIII. Additional handsets and bases

Up to 5 handsets can be registered and operated from the Pyramid base.

Each handset can be registered with up to four bases.

If you buy new handsets to use with your Pyramid they will have to be registered to the base before you can use them. See page 28.

1. Internal calls

If you have more than one handset registered to your base, you can:

- . make internal calls between handsets
- . transfer an external call from one handset to another
- . make an internal call between two handsets while a third is on an external call

- Make an internal call

Press **Int** then enter the handset number (1–5) you want.

The **int** icon is displayed to indicate an internal call.

- Receive an internal call

The **int** icon is displayed to indicate an internal call and the number of the handset calling you.

Press **Talk/Handsfree** to answer the call.

2. Transfer an external call

You can transfer an external call to another handset registered to your base.

1. During an external call, press **Int**. Your caller is put on hold.
2. Enter the number of the handset you want to transfer the call to.

If the other handset user does not answer:

You can reconnect to your external caller by pressing **Int**.

Or, if the other handset user does not answer after 30 seconds you will be automatically reconnected to your external caller.

3. When the other handset answers press **Talk/Handsfree** to transfer the call. If the other handset does not answer, press **Int** to speak to your external caller again.

AEG

3. 3-Way call

You can hold a three-way conversation between an external caller and another handset user.

1. During an external call, press **Int**. Your caller is put on hold.
2. Enter the handset number you want to invite.
3. When the handset answers, press **#/Pause** to connect all three callers. The **C^{ext}_{int}** icon is displayed to indicate a 3-way call.
4. If the other handset does not answer, press **Int** to return to your external caller.
5. Press **End call** to end the call.

4. Register a new Pyramid handset to your Pyramid base

Notes: Handset batteries must be fully charged and you must be close to the base to register.

Handsets that were supplied with your Pyramid base are already registered.

1. **At the base:** Press and hold **Find** for 3 seconds until you hear two beeps. You now have 90 seconds to register the handset.
2. **At the handset:** press **Menu/OK/Secrecy**, scroll **Down** to « **REGISTER** » and press **Menu/OK/Secrecy**.
3. Scroll **▼** to « **REG BASE** » and press **Menu/OK/Secrecy**.
4. Enter the base number (1–4). The numbers flashing are already in use.
5. The display will show « **SEARCHING...1** ».
6. The display will ask for the PIN to be entered. Enter the PIN (the default setting: 0000) and press **Menu/OK/Secrecy** to confirm. You will hear a beep. The handset is now registered.

If the base is not found after a few seconds, the handset returns to standby. Try registering again.

When a handset is registered to a base, it is automatically assigned a number which is displayed on the handset and must be used for internal calls.

If registration does not work:

- Try again selecting a different base number.
- Make sure there is no other electrical equipment very close by that may interfere with the registration signal.

AEG

5. Register a different make of handset to your Pyramid base

IMPORTANT

DECT GAP Profile only guarantees that basic calling-functions will work correctly between different makes/types of handset and base. There's a possibility that certain services such as Caller Display will not work correctly.

1. **At the base:** Press and hold **Find** for 3 seconds until you hear two beeps. You now have 90 seconds to register the handset.
2. **At the handset:** Follow the registration instructions given in your handset's user guide.

6. Selecting a base

When your handset is registered to more than one base, for example, one at work and one at home, you can select the base you want it connected to.

Handsets can be registered with up to 4 bases.

If you select « **AUTO** », your handset will automatically search for and connect with the base with the strongest signal.

1. Press **Menu/OK/Secrecy**, scroll ▼ to « **REGISTER** » and press **Menu/OK/Secrecy**.
2. « **SELECT BASE** » is displayed, press **Menu/OK/Secrecy**.
3. All bases that your handset is registered to will be displayed, e.g. « **BASE 1 2 3 4** ». The currently selected base number flashes.
4. Enter the number of the base you want to use. Or, press **Up/Down** to scroll to « **AUTO** ». Press **Menu/OK/Secrecy** to confirm.
When the handset locates the selected base you will hear a confirmation beep.

7. De-register a handset

You can use one handset to de-register another handset. You cannot de-register the handset you are using.

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **SETUP** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **DEL HANDSET** » and press **Menu/OK/Secrecy**.
3. Enter the PIN code (default setting: 0000) and press **Menu/OK/Secrecy**.
4. Enter the handset number. You will hear a confirmation beep and the display will return to the « **DEL HANDSET** » menu.

AEG

IX. Using the answering machine

Your Pyramid product can digitally record up to 60 minutes of messages. As well as recording incoming messages, you can record memos for other users.

You can operate your answering machine from:

- . the base
- . the handset
- . or remotely, from any other Touchtone™ telephone, see page 36.

You will need to set the correct day and time (if you have not already done so) so that you will know when each message was received.

1. Set the answering machine day and time using the handset.

Your answering machine will automatically add the day and time to each message that is received.

Note: If you subscribe to Caller display service, the date and time will be set on the handset automatically but you will still need to set the correct 'Day' as below.

- Set the day

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy** to confirm.
2. Scroll **Down** to « **DAY SETTING** » and press **Menu/OK/Secrecy**. The current day is displayed.
3. Press **Up/Down** to select the required day and press **Menu/OK/Secrecy** to confirm.

- Set the time

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **DATE-TIME** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **CLOCK SET** » and press **Menu/OK/Secrecy**. The current time is displayed.
3. Use the keypad to set the required time in 24 hour format, eg: 18-30 for 6.30pm. Press **Menu/OK/Secrecy** to confirm.

AEG

2. Check the current day and time setting

Press **Stop**. The current day and time setting is announced.

3. Switch the answering machine on/off

Using the base:

Press **On/Off**.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. « **ANS ON/OFF** » is displayed, press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select either « **ON** » or « **OFF** » and press **Menu/OK/Secrecy**.

4. Listening to your messages

Using the base:

1. Press **Play/Pause**. The number of new messages is announced, then the new message(s) will be played.

OR

Press and hold **Play/Pause** and the number of all (new and old) messages is announced. The oldest message is played first.

During playback:

Press **Play/Pause**, to pause a message. You will hear a beep every 10 seconds.

Press **Play/Pause** again to resume playback.

Press **Skip** to play the next message.

Press **Prev** once to repeat the current message.

Press **Prev** twice to play the previous message.

Press **Del** to delete the current message. You will hear, "Message deleted".

Press and hold **Skip** to play messages at 1.5 times normal speed. Release the button to continue playback at normal speed.

Note: If you select a message to be deleted, it will be deleted at the end of playback after the 8 second countdown and confirmation tone.

AEG

At the end of playback:

You will hear "End of messages. To delete all messages, press delete". You then have 8 seconds in which you can:

Press **Del** to delete all messages, you will hear "All messages deleted".

5. Adjust the speaker volume

You can adjust the base loudspeaker volume from low to high. Press **Vol+** to increase the volume, or **Vol-** to decrease the volume.

Using the handset:

1. Press **Menu/OK/Secrecy**, « **PLAY MESSAGE** » is displayed, press **Menu/OK/Secrecy**.
2. « **NEW MSG** » is displayed and the number of new messages, press **Menu/OK/Secrecy** to play new messages only or scroll **Down** to « **ALL MSG** » and press **Menu/OK/Secrecy** to play all of your messages. You will need to place the handset to your ear to hear the message(s).

During playback:

Press **Up/Down** to adjust the playback volume.

Press **1** or **4** once to repeat the current message.

Press **1** or **4** twice to play the previous message.

Press **3** or **6** to play the next message.

Press **Phonebook/Clear/Back** to delete the current message. You will hear, "Message deleted".

At the end of playback:

You will hear, "End of messages. To delete all messages, press delete". To delete all messages, press **Phonebook/Clear/Back**, you will hear, "All messages deleted". If you do not press any buttons during the countdown the display will return to idle and any messages you selected individually for deletion will be saved.

AEG

6. Outgoing messages (OGMs)

The outgoing message is the message a caller first hears when the answering machine picks up their call.

Your Pyramid product has two pre-recorded outgoing messages, Answer & Record or Answer Only, and you can also record your own.

The pre-set Answer and Record outgoing message, that allows your caller to leave a message, is "Hello, your call cannot be taken at the moment, so please leave your message after the tone".

7. Record your own OGM

This will replace the pre-recorded or your own previous outgoing message. However, you can re-instate the pre-recorded OGM at any time by deleting your own recorded OGM.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **OGM SETTING** » and press **Menu/OK/Secrecy**.
3. Scroll **Down** to « **RECORD OGM** » and press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select either « **ANS AND REC** » or « **ANS ONLY** » and press **Menu/OK/Secrecy**.
5. Place the handset to your ear. You will hear, "Please speak after the tone. To end recording, press **#/Pause**".
6. After the long beep speak your message slowly and clearly into the handset, to end recording press **#/Pause**.
Your message will then be played back to you through the handset.

8. Answer Only

With Answer Only selected, your caller will hear an announcement only and will not be able to leave a message. The pre-set Answer Only outgoing message is "Hello, your call cannot be taken at the moment and you cannot leave a message, so please call later".

If recording your own Answer Only message, remember to advise your caller that they will not be able to leave a message.

To reinstate either pre-recorded message, delete your own message.

AEG

9. Check your current OGM

Using the base:

Press **On/Off** on the base. The machine announces the type of OGM and plays it.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **OGM SETTING** » and press **Menu/OK/Secrecy**.
3. « **PLAY OGM** » is displayed, press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select either « **ANS AND REC** » or « **ANS ONLY** » and press **Menu/OK/Secrecy**.
5. Place the handset to your ear, and you will hear the current OGM.

10. Select the OGM

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **ANS MODE** » and press **Menu/OK/Secrecy**.
3. Press **Up/Down** to select either « **ANS AND REC** » or « **ANS ONLY** » and press **Menu/OK/Secrecy** to confirm.

11. Re-instate the pre-recorded OGM

You can delete your own outgoing message and return to the pre-recorded outgoing message.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **OGM SETTING** » and press **Menu/OK/Secrecy**.
3. Scroll **Down** to « **DELETE OGM** » and press **Menu/OK/Secrecy**.
4. Press **Up/Down** to select either « **ANS AND REC** » or « **ANS ONLY** » and press **Menu/OK/Secrecy**. Your personal OGM has been deleted and the pre-recorded OGM will be played.

Note: You cannot delete the pre-recorded OGMs.

AEG

12. Answer delay

Answer delay sets the number of times your Pyramid product will ring before the answer machine picks up your call and starts playing the outgoing message.

You can change this setting to between 2-9 rings or Time Saver. The default setting is 4 rings. When the answer on/off setting is set to off, the answer delay is 20 rings.

Using the base:

Press and hold the **Skip** button and release after the number of rings required.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **ANS DELAY** » and press **Menu/OK/Secrecy**. The handset will display the current setting.
3. Use **Up/Down** to select the number of rings required and press **Menu/OK/Secrecy** to confirm.

- Time saver

When you call from another phone to access your messages remotely, if your answering machine is set to time saver and you have new messages it will answer after 2 rings, if you do not have any new messages, it will answer after 6 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call. Your handset will automatically return to standby if no button is pressed for 15 seconds or more.

13. Record a memo

You can record memo messages for other users which can be played back just like normal messages. Memos can only be recorded using the handset.

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **MEMO REC** » and press **Menu/OK/Secrecy**. Place the handset to your ear and you will hear, "Please speak your messages after the tone. To end recording, press **#/Pause**, then a beep is heard.
3. You can now record your memo by speaking into the handset, press **#/Pause** to end recording.

AEG

14. Call screening

When the answering machine is on and takes a call, you can use the loudspeaker to listen to the caller leaving a message.

The handset display will show « **SCREEN?** ». Press **Menu/OK/Secrecy** to begin screening the call via the handset. If you wish to take the call while screening, press **Talk/Handsfree**.

15. Memory full

If there is less than 35 seconds recording time left in the memory, the caller will hear, "Please complete your call within 35 seconds", after the outgoing message and before recording tone.

If the memory becomes full during recording the machine announces, "Sorry, the memory full", and ends the call.

When the memory is full, the machine automatically switches to the Answer Only outgoing message.

Your Pyramid product can store up to a maximum of 60 minutes recording or 59 messages.

X. Using remote access

You can operate your answering machine from any Touchtone™ phone by calling your Pyramid product and entering a 3 digit security PIN code.

The default PIN setting is 000. To change it, see 'Set the security PIN code' on page 37. Using a PIN code prevents other people from accessing your answer machine and messages without permission.

1. Operating your answering machine from another phone

1. Dial your telephone number. When you hear your outgoing message, press ***/Keypad lock**. The machine announces, "Please enter your security code".
2. Enter your 3-digit PIN (default setting 000) within 8 seconds. You will hear, "You have 'n' new messages" and they will be played back.

Note: If you enter an incorrect PIN code you will be allowed one further attempt, if it is still incorrect you will hear "Incorrect security code" followed by a beep and then your Pyramid product will hang up.

AEG

3. If you have no new messages, you will hear, "You have no new messages, to hear main menu press 1". If you do not press 1 within 8 seconds, the machine hangs up.

When you press 1, you will hear the main menu.

Simply follow the instructions as announced:

"To play all messages press 2".

"To play new messages press 3".

"To skip back during messages press 4".

"To delete during messages press 5".

"To skip forward during messages press 6".

"To set answer on or off press 7".

"To hear the outgoing message menu press 8".

"To set a new security code press 9".

"To hear main menu again press 1".

When the last message is played you will hear, "End of messages".

2. Set the security PIN code

Using the handset:

1. Press **Menu/OK/Secrecy**, scroll **Down** to « **TAM SETTINGS** » and press **Menu/OK/Secrecy**.
2. Scroll **Down** to « **REMOTE CODE** » and press **Menu/OK/Secrecy**. The handset will display the current code.
3. Enter a new code and then press **Menu/OK/Secrecy** to confirm.

3. Check security code

1. Press **Del** at the base. The security code is announced.

XI. Help

Most problems are caused by the telephone and mains power cables being incorrectly connected, not connected at all, or by the power being turned off.

If you are experiencing a problem with your Pyramid, check the following:

- . That the mains power supply is correctly connected at both the base and at any chargers, and that the power is switched on at the wall socket.
- . That the telephone line cord is correctly connected.
- . That the handset batteries are installed correctly and charged.

AEG

No display

- Check that the batteries are correctly inserted into the handset and fully charged.
- Check that the handset is switched on. Press **End call**.

No dial tone

- Check that the telephone line cord is properly connected.
- Another handset may be using the line. Wait for the other handset to hang up.

Y icon flashing

- Handset is out of range. Move closer to the base.
- Check the mains power is connected and switched on.
- Handset not registered to the base. To register a handset, see page 28.

Base or handset does not ring

- Check that the ringer volume has not been set too low or Off, see page 21 and 24.

Keypad does not seem to work

- Check that the keypad lock is not on, see page 16.
- Try removing the batteries and putting them back again.

Incoming caller's number is not displayed even though you have Caller Display

- Caller has to allow their number to be sent. It has been withheld or is unavailable.

Answering machine will not record new messages

- Is the recording memory full? Play and delete messages, see pages 31-32.
- Is the OGM set to Answer Only? Change the OGM to Answer & Record, see page 34.

XII. General information

IMPORTANT

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to the emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Syria, Jordan and Lebanon..

Safety

- . Only use the power supply suitable for the Pyramid range. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone.
- . For the handset, use only AAA NiMH batteries with a minimum capacity of 550mAh.
- . Never use other batteries or conventional alkaline batteries as this could lead to a short circuit or destroy the battery casing.
- . Do not open the handset (except to replace the handset batteries). This could expose you to high voltages or other risks.
- . Radio signal transmitted between the handset and base may cause interference to hearing aids.
- . It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- . It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- . Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

- . Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe.
- . Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- . Do not expose to direct sunlight.
- . The product may become warm when the batteries are being recharged. This is normal. We recommend that you do not place the product on antique/veneered wood to avoid damage.
- . Do not stand your product on carpets or other surfaces which generate fibres or place it in locations preventing the free flow of air over its surfaces.
- . Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- . Do not expose your product to fire, explosive or other hazardous conditions.
- . There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

- Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

- Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

AEG

Connecting to a switchboard

This telephone may be connected to most types of switchboard, however in the event of any difficulties, consult your switchboard Service Provider.

Dialling mode

Your Pyramid is set to Tone dialling.

Recall duration

Your Pyramid is set to a Recall duration of 100ms.

You cannot change the setting.

Access code and entering a pause

Some internal switchboards may require you to enter an access code (e.g. 9) to get an outside line. So that the switchboard has time to pick up an outside line before the rest of the number is dialled, you may need to add a pause in the dialling sequence. For example: 9 P 0845 833 1673.

1. After the access code, press and hold **#/Pause** to insert a pause before entering the telephone number. The display shows P.

Technical information

How many telephones can you have?

All items of equipment have a Ringer Equivalence Number (REN) which is used to calculate the number of items that may be connected to any one telephone line. The Pyramid has a total REN of 1, i.e. for a base and up to 5 handsets. Any other instrument may be assumed to have a REN of 1 unless stated otherwise.

A total REN of 4 is allowed per telephone line. (For example, if the Pyramid is used in conjunction with three extension telephones, each with a REN of 1, then the total = 4.)

R&TTE

This product is intended for use within Syria, Jordan and Lebanon. for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

AEG

Declaration of Conformance

Hereby, AEG declares that this Pyramid is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Standard:	Digital Enhanced Cordless Telecommunications (DECT)
Operating Frequency:	1880-1900 MHz
Range:	300 m outdoors and 50 metres indoors, in ideal conditions
Operating duration:	160 hours standby time 10 hours, 30 minutes talk time
Operating temperature:	0°C to 45°C (32°F to 113°F)
Storage temperature:	-20°C to 60°C (-4°F to 140°F)
Rechargeable batteries (per handset):	2 x NiMH 550 mAh 1.2V (AAA)
Base unit voltage:	230V / 50Hz

AEG



ASISTANCE TECHNIQUE :

assistance@sopeg.fr

Ou

Au numéro suivant :

+ 33 (0)5-45-60-82-51



Service technique : assistance@sopeg.fr

ou

05-45-60-82-51 (prix d'un appel local)